


TAMPER PROOF

PMP-25-TP PFR-1550-TP
PFR-1750-TP ROC-50-TP
CR-150-TP

Back View

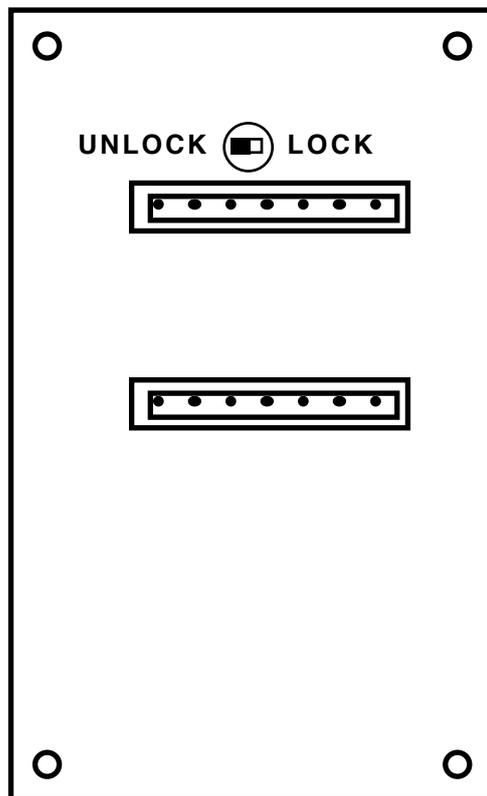

The Tamper Proof switch **LOCKS OR UNLOCKS** the front ENTER button. When the switch is to the **LEFT**, as shown, data can be entered or changed using the ENTER button on the front setup panel. When the switch is to the right, the ENTER switch is disabled and no data can be changed using the front setup panel.