




53 Technology Park Rd.
Sturbridge, MA 01566
888-600-3247 508-347-2064 FX

Defeat Start-Up Timer PMP-25

- 1) Remove PMP-25 from installed panel and use Phillips screw driver to remove 4 screws from the back corners of the enclosure to separate the enclosure halves.
 - 2) Use Phillips to remove 3 screws holding the circuit boards together. Unplug the circuit boards
 - 3) Use 1/4 inch nut driver to remove 3 standoffs holding the remaining circuit board into the front cover. A ribbon cable connects the keypad to this board.
- BE CAREFUL not to stress this ribbon cable. Unplug this ribbon cable from the keypad. This is the board you are going to remove a component on.
- 4) With a pair of cutters remove Q3. Q3 is a three terminal device that is black in color. See picture below for location.

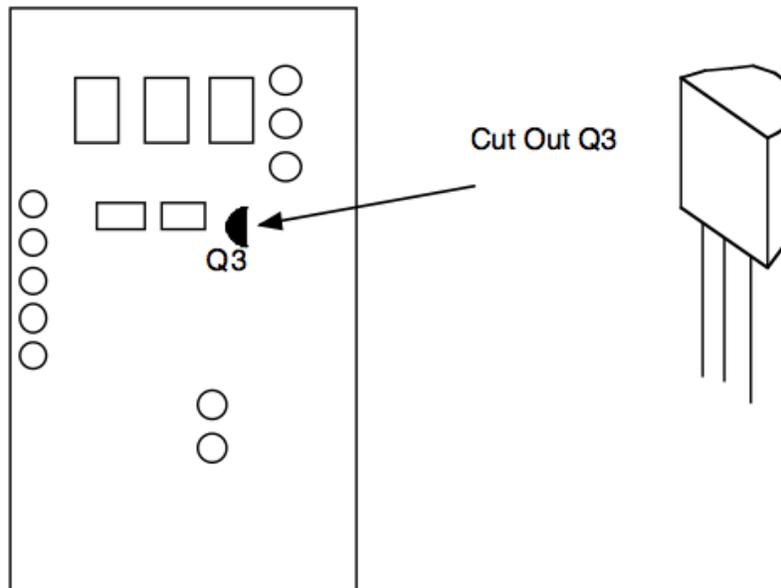

- 5) Reassemble circuit boards and enclosure. BE CAREFUL not to over tighten screws and standoffs , they might strip easier the second time tightened.

*** If you have any questions PLEASE CALL ***